

HP 02 ink system Instruction

When you are installing the cartridges, leave the ink tanks lower or the same level and do not take the colorful plugs and caps out of the ink tanks. The ink tanks should be at the same level as your printer. If the ink tanks are higher than your printer, ink will flow out of the cartridges and go into your printer. After you complete the installation of the ink system, plug the air filters as the following pictures show.

Do not get the chips wet or they will be damaged.

If there are air bubbles in the tubes, please let the printer fill the cartridges (the air filters must be plugged before you do this), and run several clean cycles, then the air will be removed.

If your printer does not recognize the cartridges, please take the cartridges out, then re-install them. Sometimes the cartridges(chips) do not contact well with the printer.

1. take the bigger rubber plug out of the ink tanks.



A.

2.



B

3.



C

HP 02 ink system installation
www.EchoStore.com

4. Insert the plug into the ink tank.



D

HP 02 ink system installation
www.EchoStore.com

5. Insert the air filter into the rubber plug. We have two kinds of air filters, so picture E. F are the same as G.H.



E.

6.



F.

Please repeat 1-6 to insert all six air filters.




G.

HP 02 ink system installation

www.EchoStore.com

7. Please remove all the small caps when you use this ink system at first. When the ink level is a little lower, put the caps back. If you do not take the small caps out of the ink tanks, maybe the ink can be out of the air filters. It is just because we fill too much ink in the ink tanks.

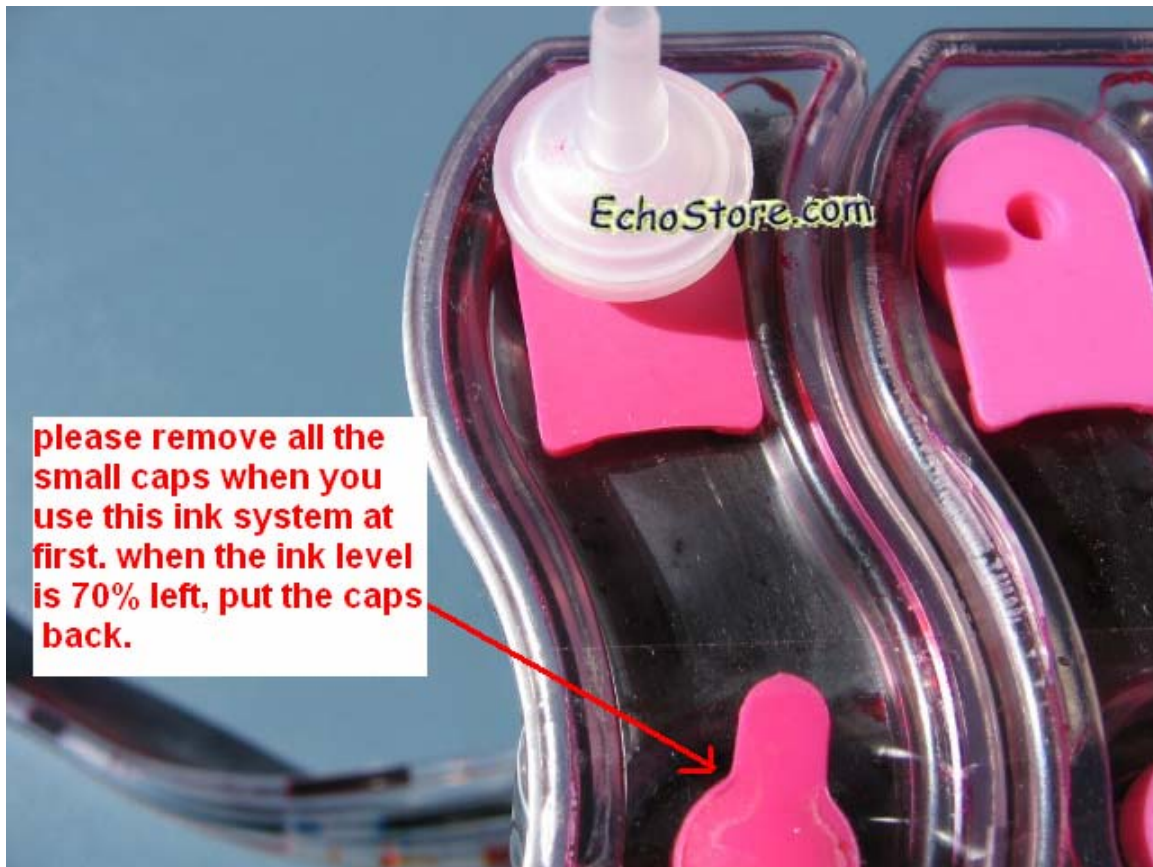

H.

HP 02 ink system installation

www.EchoStore.com