

### HP 88 continuous ink system installation

1. install the cartridges
2. insert the air filters so that the ink tanks can breathe, the fat side is down. Please do not insert the air filters too tight, or the stem will be broken.
3. No knits or twists when the lid is closed so that the ink can go to the cartridges.
4. the ink tanks should be at the same level as your printer
5. When the printer shows the cartridges are depleted/missed/damaged, please press the “ok” button to bypass the error message. Sometimes the cartridges need to be re-installed.
6. Please fill the ink refills when the ink is about ½ inch left in the ink tanks. Do not wait until the ink runs out completely.





