

www.echostore.com

Epson 4880/7880/7450/9450 Cartridge Reset Instruction

www.echostore.com

1. Install cartridges according to the color (The printer must be initialized)
2. Turn on the printer .Press the button“▼”for five times and then display : YES NO
3. Press the button (with right arrowhead) for only one time and then display: DAMAGE FROM
4. Press the button“▼” for five times and then display : ACPT DECLINE
5. Press the “Enter key” for one time, and press the button“▼”for one time, it will display:
GENUINE EPSON
6. Press “Enter key” for one time and then display: PRINTER SETUP
7. Press the button“▼” for four times, then display: MAINTENANCE
8. Press “Enter key” for one time and the button“▼”one time and then press “enter key” once more, then display: BK INK CHANGE
9. Press “Enter key” for one time, display: BK INK CHANGE EXEC
10. Press “Enter key” for one time ,wait a moment. OK!!!.
11. **Attention:** This cartridge is forbidden to use a chip resetter

www.echostore.com