

# Continuous Ink Supply System (ST series)


## Instruction

Features: Easy operation, cleanness, no damage for cartridges;  
It is can be suitable for ST, XM,CK series.

### Method 1.



ST CISS

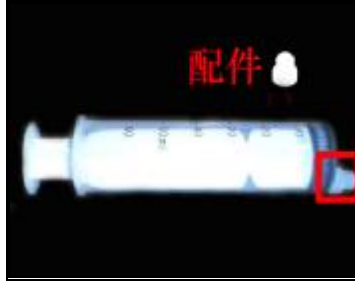


Syringe matched with a rubber plug




Pull out the rubber plug on ink hole and air hole



Insert the syringe in the ink filling hole, Then, cover air hole  
Fill 2/3 ink into the reservoir bottle

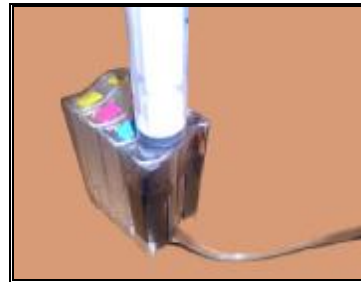

Insert syringe which attached with special rubber plug into the ink filling hole

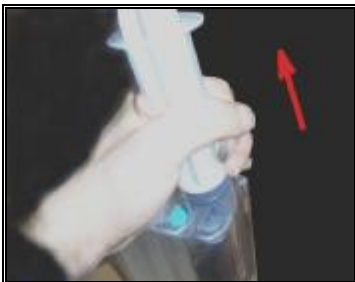

Pls pull the plunger upward, till 1/2 of the syringe, then release the plunger, Ink shall flow into the cartridge directly under the air pressure.



Repeat the operation



till the ink cartridge full with ink.

## Method 2.



Manuel syringe



Insert the manuel syringe which with the white rubber plug into ink filling hole



Pull the plunger backward till 1/2 of the syringe, holding 5 seconds



Then push the plunger, the air shall flow out from the other valve of the syringe. Repeat this operation, which can vacuum the cartridge.



Pull out the manuel syringe



Ink shall flow into the cartridge automatically in few seconds, it can be full in one time.

### Notes:

1. Pls don't draw ink from the ink exit hole at the bottom of cartridge, which shall make many troubles, even damage the cartridge's structure.
2. When you choose the syringe, 60ml would be fine, if using 10ml syringe, you may need to repeat such operation more times,